



FREESTANDING WHIRLPOOL BATHTUB

IRIS

 
170 X 80cm



INSTRUCTIONS




Positioning and Drain pipe

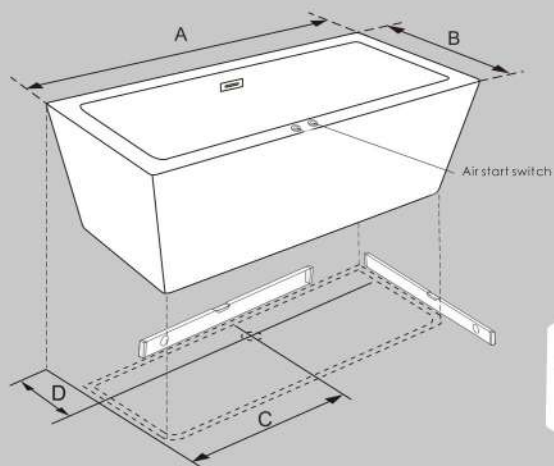


Cm	A	B	C	D
170X80X58	170	80	85	26.5




  1

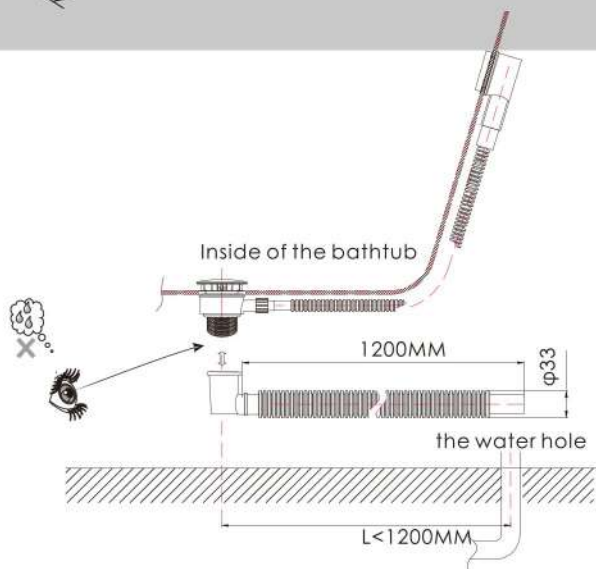

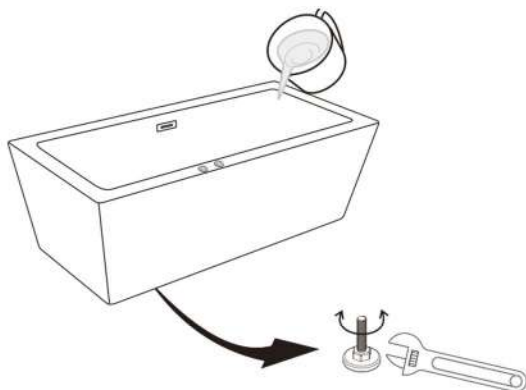

 Pour some water into the bathtub to test drainage and check for leaks. If necessary, adjust by legs by tightening with a spanner wrench. If a leak is found, adjust bathtub to level. Adjust the feet screws and make sure the water flows into the drain.

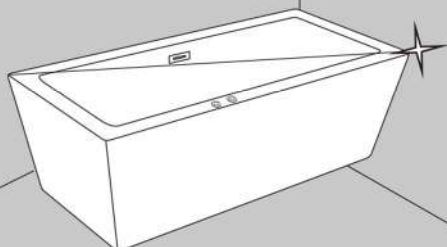

Before installation :

1、 Please reserve enough space for installation according to the structure and size of the bathtub, also leave space for draining.

2、 Unpack the carton carefully and check if there's any damage on bathtub.

Although the bathtub is good quality, in case some damage occurred during incorrect handling, we recommend you to check carefully.

3、 Bathtub outside is covered with protecting film. Before installing, remove the protective film around the bathtub. Be careful not to scratch the bathtub surface.

Please note:

1、 Locate water inlet and drain according to the bathtub before using it.

2、 Electrical products (such as hair dryers, etc.) near the bathtub should be fixed to avoid falling into the bathtub.

3、 Children and patients are not allowed to use the bathtub alone, unless accompanied by those who are able to use the bathtub and are responsible for their safety.

Care and maintenance:

1、 Clean with liquid detergent and soft cloth. Do not use acetone, ammonia or detergent containing organic solvent. If it is necessary to disinfect, it is forbidden to use formaldehyde products, otherwise the surface of the bathtub may be damaged.

2、 Repairing a scratch: If any scratches occur, these can be removed by rubbing with 1500 grit waterproof abrasive paper. Then add some toothpaste and polish the bathtub with flannel to make it shine as new.

 


POWER REQUIRED



DXD PUMP

MODEL DXD-310 A AC 220-240V 50Hz 700W CLASS F IPX5

MAX WATER TEMPERATURE 50°C 15u F/450V Hmin 1m

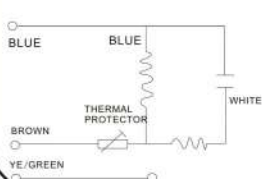

  Ground properly!
Do Not Start Pump
Without Water!

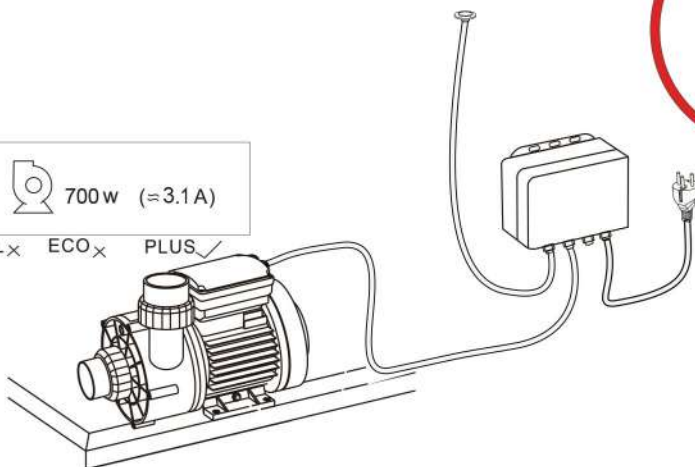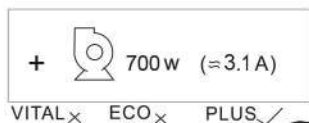

DO NOT START PUMP WITHOUT WATER!



WARNING / IMPORTANT SAFETY INFORMATION

- Always disconnect the power supply before carrying out any cleaning, inspection, or maintenance.
- Never operate the water pump without sufficient water in the bathtub.
- Keep all electrical components and the controller away from water and moisture.
- Any electrical maintenance or repair must be performed exclusively by qualified personnel.
- Use only the specified power supply: AC 220 V.
- Failure to follow these instructions may result in electric shock, fire, equipment damage, or personal injury.

Important Notice

Warning: Do not activate the water pump if there is insufficient water in the bathtub.

Operating Environment

Power Supply: AC 220 V

User Safety Instructions

1. Read the instructions carefully before installing and using the product to ensure proper and safe operation.
2. Pay close attention to the high-voltage components and warning signs on the product. Do not touch these areas under any circumstances. Failure to do so may result in electric shock or serious injury.
3. Do not expose the controller to moisture, water, or high temperatures, as this may cause fire, electric shock, or damage to the equipment. After use, wipe the controller thoroughly with a dry cloth and keep it dry.
4. Keep the water clean and free from solid debris or foreign objects. Debris may clog the water inlet, pipes, or other components, potentially causing damage to the equipment or fittings. If a blockage occurs, immediately switch off the power supply before cleaning the affected components. Do not restart the system until the blockage has been completely removed.
5. Do not pull, bend, or tamper with any cables or connections. Do not strike, drop, or handle the equipment roughly, as this may damage the external housing or internal components.
6. Do not open or remove the controller cover. Dangerous electrical components are located inside the controller and may cause electric shock. Maintenance and repairs must only be carried out by qualified and authorized service personnel.
7. The power supply must comply with the voltage specified on the controller. Do not connect the product to an unsuitable or incorrect power supply, as this may cause serious damage to the controller and other electrical components.